技术要求：

材质：105g哑粉纸

尺寸：70*97mm

风琴折页双面印

印刷要求：色相正确、印迹牢固、套印准确、各色套印、不露杂色，颜色及专色：Pantone cool gray 11C、

ENCHEN

Instruction Manual of Hair Clipper



Shanghai Qiaopusi Smart Sci-Tech Development Co., Ltd.

Important Safety Instructions

Danger:
1.This product and its accessories are not toys. Please put them out of the reach of children to avoid danger.
2. Do not use wet hand to plug and pull the power cord, keep the power cord away from sticky liquid or other liquids.
3. Do not immerse the hair clipper in water, body, adapter and power cord etc. Do not use it in bathroom.
4. This product contains a built-in rechargeable battery. Do not drop the battery into fire and never charge, use or place it at the place where temperature is high.
5. Do not use the hair clipper when its power cord or adapter is damaged or when the connection between it and the electric outlet is loose.
The symbol on the right indicates that the hair clipper' s body cannot be cleaned under a running tap.
Warning: Please keep the hair clipper' s body dry.

Warning:
1.Remember to keep the power cord and this product dry.
2.Do not rinse the hair clipper with water.
3. Before connecting the power cord and charging, make sure that the voltage marked on the body of this product matches the local power supply voltage.
4. If the power cord is damaged or lost, please purchase the original model from the manufacturer or after-sales maintenance department for replacement.
5. Please use and store this product at a place where the temperature is between 0°C and 35°C.
6. If any abnormal smell or smoke from this product is found, stop using it immediately. Please deal with the problem according to the type of malfunction and if necessary, take it to the maintenance department of our company for repair.
6. Do not use broken or damaged trimming comb.
7. Do not try to disassemble the hair clipper' s body for battery replacement.
8. Do not immerse this product in water or any liquid.
9. Do not shake down or drop this product. If it is damaged due to collision or fall, please stop using it.
10. Children under 8 years old, people with mental disorders or lack of relevant experience and knowledge (including children) should use this product under the supervision and guidance of their guardians.
11. Please do not use it on animals.
12.Before taking out the battery, the motor must be power off.

Product Features

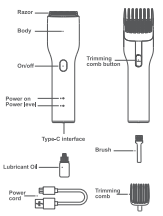

Use

Assemble trimming comb
According to the demand of haircut, you shall adjust the trimming comb to corresponding length.
Push one end of the trimming comb toward the tool body, and it is ready to use. According to the demand of haircut, you can adjust the trimming comb to corresponding dimensions to cut hair.
If you finish using the trimming comb, you can press the button of the trimming comb, and then gently pull the trimming comb outwards with one hand to remove the trimming comb.
Cut hair with the hair clipper and trimming comb
Do not force the trimming comb to shut down while cutting hair. Choose proper cutting position of trimming comb. There are 7 cutting position for keeping hair length with the length from 3mm to 21mm.
Cut hair from the top of the head and sides
Hold the trimming comb in hand, make the bottom of the comb always in contact with the scalp, and move it slowly forward in the opposite direction of hair growth, push and shave hair repeatedly from front to back. It is recommended that the hair clipper moves at 1cm per second on average.
Trim the hair at the back of the head and sideburns
Push and shave the hair repeatedly from the bottom to the top until the hair at the back of the head and sideburns is cut to appropriate length.



Charging

1.Make sure that the hair clipper' s power is off before charging.
2. The hair clipper should be charged when its battery is about to run out.
3. Connect one end of the power cord to the adapter and the other end to the TYPE-C interface in the hair clipper. Then insert the plug of the adapter into the socket. After the first charging time, the power indicator blinks. After the battery is fully charged, the power indicator lamp will light up continuously.
4. Before using this product for the first time, make sure to let it fully charged. It takes about 1-2 hours for this product to be fully charged.
5. The applicable voltage for this product is DC5V.
6. In order not to affect the service life of the product, please remove the adapter from the electrical outlet after the battery is fully charged, and recharge the battery after the power is used up. Do not let the hair clipper be left unused continuously connected to the power supply after it is fully charged.
7. Do not charge the hair clipper in the packaging box.
8. The hair clipper can be used when being charged.

Tips: When the battery is empty and the hair clipper cannot be turned on, it can be used by directly connecting the hair clipper to the power supply. If it will not be used for a long time, please charge it at least once every six months. The hair clipper can be used for about 90 minutes at full power.

ENCHEN

Shanghai Qiaopusi Smart Sci-Tech Development Co., Ltd.
Add: Room 103, 3th Bld, No.320 Dongjian Rd, Minghang District, Shanghai, China, 201102

Cleaning and Maintenance

Warning: This product is non-waterproof. Do not rinse the hair clipper' s body with water.
Before using the product, the razor and the cutter tooth shall be lubricated by the lubricant oil provided by the manufacturer.

Before cleaning, please turn off the power, and remove the plug of the power cord from the power socket.
Remove the trimming comb, and dismantle the razor. When dismantling the razor, hold out against the cutter tooth of the razor with your thumb, and then apply force according to the direction of arrow.

Please use the special cleaning brush to brush off the hair at the opt of the razor.

Warm Reminder

To prevent the razor from falling down and being broken, please use one hand to push while using the other to hold the razor when dismantling the razor. The life of the hair clipper is directly related to the use frequency and maintenance.
It is normal for the razor to be slightly heated during use, and this will not affect the normal use.

Important Safety Instructions

Note: The battery used in this hair clipper is ICR14500 type 3.7V rechargeable lithium battery. When you remove the battery, turn off the power supply and allow the hair clipper to run until the battery is depleted.

1. Open the rear cover with a slotted screwdriver;
2. Use a screwdriver to unscrew the screw on the hair clipper;
3. Use a cross screwdriver to unscrew the two screws on the circuit board and take out the circuit board;
4. Cut off the electricity contact piece on the battery, take out the battery and dispose it properly.

Note: Do not let the electricity contact piece of the battery short.

Troubleshooting

Trouble	Cause of Trouble	Solution
Do not work after being switched on	On/off button stops working	Send the hair clipper back to the officeaftr center for repair
	Battery power is exhausted	Connect the hair clipper to power cord and charge the battery
	Circuit failure	Send the hair clipper back to the officeaftr center for repair
Charging indicator is not working	Failure in power supply connection	Connect the hair clipper to power cord and charge the battery
	Broken indicator	Send the hair clipper back to the officeaftr center for repair
	Circuit failure	Send the hair clipper back to the officeaftr center for repair
Overtime charging time	Battery life is up	Send the hair clipper back to the officeaftr center for repair
	Circuit failure	Send the hair clipper back to the officeaftr center for repair

Environment Protection

The built-in rechargeable battery may contain substances that can pollute the environment. Before discarding the hair clipper, the battery must be removed or sent the hair clipper to the official designated recycling station to dispose the battery. You can also send the abandoned hair clipper to the company' s designated recycling department, and the maintenance department will decompose and recycle the battery.

Warning

Do not short-circuit the battery in case of fire caused by burning battery.
Do not drop the battery into fire in case of explosion or release of toxic substances.

Basic Specifications

Product Name: Hair clipper
Model: Boost
Nominal Voltage: 5V ⎓
Rated Power: 5W
Charging Time: 1.5 Hours

This product provides the following guarantees

1. This product is manufactured through strict quality management and inspection process.
2. If any malfunction happens to the product when it is being used normally, consumers can enjoy free service provided by the seller or the maintenance center of our factory according to the content of the warranty card.
(The battery and the shaving unit belong to consumable products, which are not covered by warranty and provided for a fee.)
3. Under the following circumstances, customers cannot enjoy free service
A. damages caused by maintenance and modification not approved by our company;
B. damages caused by errors, negligent use or accidents;
C. damages caused by natural disasters or abnormal voltage;
D. damages caused by failure to comply with the instructions of this product' s user manual.
4. This warranty card can be used as the warranty voucher.

ENCHEN

Руководство пользователя машинкой для стрижки волос



Shanghai Qiaopusi Sci–Tech Development Co., Ltd.

ВАЖНЫЕ МЕРЫ БЕЗОПАСНОСТИ

1. Устройство и аксессуары к нему не является игрушкой. Держите подальше от детей во избежание несчастных случаев.
2. Не подключайте шнур питания к устройству мокрыми руками, держите его подальше от любой жидкости.
3. Убедитесь, что корпус устройства, шнур питания и адаптер питания сухие. Не рекомендуем пользоваться в ванной комнате.
4. Устройство содержит встроенный перезаряжаемый аккумулятор. Не прибегайте его к открытому огню, не заряжайте и не используйте в помещении с высокой температурой.
5. Не используйте устройство, если шнур или адаптер питания повреждены, а также если устройство не плотно вставлено в розетку.

Знаком справа обозначают, что корпус машинки для стрижки нельзя мыть под проточной водой. Держите корпус устройства сухим.

МЕРЫ ПРЕДОСТОРОЖНОСТИ

1. Держите устройство и шнур питания сухими. Не промывайте машинку для стрижки под водой.
2. Перед зарядкой машинки для стрижки убедитесь, что напряжение сети совпадает с требуемым напряжением для устройства.
3. Рекомендуем использовать оригинальный шнур питания для зарядки устройства.
4. Храните при температуре от 5 °C до 35 °C.
5. Если вы обнаружите неисправность работы прибора, незамедлительно прекратите использование прибора. Обратитесь в сервисный центр или к производителю для решения возникшей в устройстве проблемы.
6. Не пользуйтесь машинкой, если насадка-гребень повреждена.
7. Не разбирайте корпус устройства для замены аккумулятора.
8. Не погружайте устройство в воду или другие жидкости.
9. Не роняйте устройство. Прекратите использование в случае повреждения или падения.
10. Люди с ослабленным интеллектом, неполными расстройствами или соответствующим опытом и знаниями, детей должны пользоваться устройством только под присмотром опекунов.
11. Не используйте машинку для стрижки волос на животных.

ОПИСАНИЕ УСТРОЙСТВА

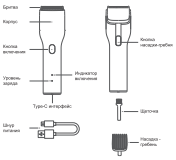

ИСПОЛЬЗОВАНИЕ

Установка насадки-гребня

- В зависимости от стрижки, вы можете настроить насадку-гребень на нужную длину.
- Надвиньте насадку-гребень на корпус машинки, и она готова к использованию.
- После завершения использования насадки снимите ее нажатием на одной руной, чтобы отсоединить ее корпуса машинки.
- Рекомендуем стричь чистые, растрепанные волосы.
- Не прикладывайте слишком много усилий, чтобы не остановить работу насадки-гребня.
- Выберите нужную машинкой насадки для стрижки из 7 возможных для регулирования длины волос от 3 до 21 мм.
- Также рекомендуем начинать стрижку с верха головы, двигайте на боковые стороны.
- Кратко держите машинку в руке так, чтобы она насадка постоянно касалась кожи головы, и двигайте в медленно вверх против направления роста волос.
- Для достижения лучших результатов следует оставить волосы в районе родинки.
- Далее рекомендуем перейти на заднюю сторону головы и бакенбарды, и стричь, пока длина волос не выравнится.

ЗАРЯДКА

1. Убедитесь, что машинка для стрижки волос выключена перед тем, как зарядить устройство.
2. Устройство следует заряжать, когда батарея почти разряжена.
3. Вставьте один конец шнура питания в разъем Type-C на корпусе устройства. Затем вставьте адаптер питания в розетку. В этот момент индикатор заряда начнет мигать. После полного заряда индикаторная лампочка будет гореть постоянно.
4. Зарядите устройство полностью перед первым использованием. Время полного заряда занимает около 1,5 часов.
5. Требуемое напряжение для заряда устройства – 5 В постоянного тока.
6. Для продления срока службы устройства вынимайте его из розетки после полного заряда аккумулятора, и перезаряжайте, когда батарейка садится.
7. Не заряжайте устройство в упаковочной коробке.
8. Вы можете пользоваться машинкой для стрижки волос в процессе зарядки.

Совет: если батарейка не заряжена, вы можете пользоваться устройством для стрижки, подключенной непосредственно к источнику питания.

Если вы не пользуетесь устройством в течение длительного времени, рекомендуем полностью зарядить его каждые раз в 6 месяцев.

Машинка для стрижки может работать в течение 90 минут при полном заряде.

ОЧИЩЕНИЕ И УХОД

Предупреждение: Данное устройство не водонепроницаемое. Не допускайте попадания воды на корпус устройства.

- Перед использованием машинки для стрижки, бритвы и режущих зубчиков регулярно мыть смазкой.

- Перед очищением машинка должна быть выключена и отключена от сети питания.
- Снимите насадку-гребень и бритву.
- Чтобы снять бритву, придерживайте большим пальцем зубчиком в сторону от себя и надавите на рычаги на картинке.

- Используйте специальную щеточку, чтобы очистить машинку от волос.

- Чтобы предотвратить бритвенное жжение от трения, рекомендуем второй рукой придерживать в процессе снятия с машинки.
- Срок службы машинки напрямую зависит от частоты использования и бережного отношения к устройству.
- Первая минут слегка нагревается в процессе использования, но это не влияет на работу устройства.

ВАЖНЫЕ МЕРЫ БЕЗОПАСНОСТИ

Обращение внимание: в машинке для стрижки волос используется ICR14500 3,7В перезаряжаемая литиевая батарея. Перед изъятием ее необходимо выключить устройство и отсоединить его от сети питания.

1. Используйте шлицевую отвертку, чтобы открыть тримммер-в отделение, как указано на картинке.
2. Используйте крестообразную отвертку, чтобы ослабить 2 винта на задней крышке и снять их.
3. Используйте крестообразную отвертку, чтобы ослабить винты на водонепроницаемой печатной стороне, и снимите их.
4. Снимите плату, отсоедините контакт батареи, а затем достаньте ее и утилизируйте надлежащим образом.

ОСТЕРЕГАЙТЕСЬ КОРОТКОГО ЗАМЫКАНИЯ.

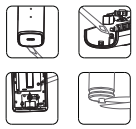

УСТРАНЕНИЕ НЕИСПРАВНОСТЕЙ

Проблема	Возможная причина	Решение
Не работает после включения	Кнопка включения не работает	Отправьте устройство в гарантийный центр для починки
	Заряд батареи недостаточный	Подсоедините бритву к источнику питания и зарядите
	Повреждение электронной цепи	Отправьте устройство в гарантийный центр для починки
Индикатор заряда не работает	Ошибка подключения питания	Подсоедините бритву к источнику питания и зарядите
	Индикатор сгорел	Отправьте устройство в гарантийный центр для починки
	Повреждение цепи	Отправьте устройство в гарантийный центр для починки
Продолжение сети после бритвы	Требуется замена кнопки для отключения и адаптация сети	При использовании бритвы не касаясь кнопки сети. Разъединение розетки прекратится через 30 секунд и начнется повторное подключение
	Сбой службы авторотации кнопки	Отправьте устройство в гарантийный центр для починки
Отключить розетку после выхода бритвы	Замыкание цепи	Отправьте устройство в гарантийный центр для починки

УТИЛИЗАЦИЯ БАТАРЕИ

Встроенный перезаряжаемый аккумулятор содержит вещества, которые могут загрязнить окружающую среду.

Рекомендуем вынуть батарею или отправить электробритву в официальный центр по переработке сырья для изъятия и последующей утилизации батареи.

Также можете отправить использованную бритву в специализированный отдел по переработке в компании для утилизации будет разобрано и утилизировано.

Предупреждение:

Предохраняйте аккумулятор от коротких замыканий во избежание возгорания и взрыва. Не бросайте аккумулятор в открытый огонь. Они представляющие взрыва и ядовитые опасные вещества в окружающую среду.

ХАРАКТЕРИСТИКИ УСТРОЙСТВА

Наименование: Машинка для стрижки волос
Модель: Boost
Напряжение: 5В
Мощность: 5 Вт
Время зарядки: 1,5 часа

ГАРАНТИЙНОЕ УДОСТОВЕРЕНИЕ

Наименование	Гарантийное обслуживание	Гарантийный период
Машинка для стрижки волос		1 год с момента покупки
Дата покупки		
Адрес клиента		

ГАРАНТИИ

1. Устройство производило под строгим контролем качества.
2. При возникновении неполадок в процессе корректного использования устройства пользователи могут воспользоваться гарантийным обслуживанием, предоставляемым продавцом или сервисным центром производителя в соответствии с содержанием этого гарантийного талона.

Категории бренда имеют качество расходных материалов, на которые гарантийное обслуживание не распространяется, и не предоставляется за оплату.

3. Гарантийное обслуживание не предоставляется в следующих обстоятельствах:
- Повреждения, возникшие вследствие использования и модификации устройства, не одобренным производителем;
- Повреждения, вызванные небрежной эксплуатацией или случайными случаями;
- Повреждения, вызванные природными катаклизмами или скачками электрического напряжения;
- Повреждения, возникшие по причине не ознакомления пользователем данной инструкции по эксплуатации.

Manual